

# eWagon (Model #3912)

## Wire Cutting Instructions



1. Remove battery from wagon.
2. Locate the wire connector under the front of your wagon.
3. Disconnect the wires by squeezing connector tabs and pulling.
4. Cut the wire that is connected to the handle
5. Upload an image of the cut wire and handle on the recall submission form. Image must show the bottom of the handle with the cut wire. Wagon must be retained until reimbursement is received. Additional images may be required.

Questions? Contact customer service: 1-800-621-7613 or [custserv@radioflyer.com](mailto:custserv@radioflyer.com)


1. Remove Battery



2. Locate Wire



3. Disconnect Wire

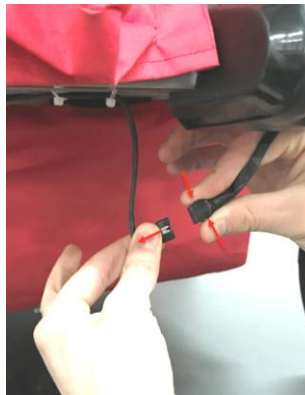

4. Cut Wire



5. Upload Image

